ROUZ ASTRO
Astronomy Solutions

Carry handle

Assembly instructions · 7 steps

1 On the upper dovetail

The carry handle bolts to our aluminum Losmandy-style upper dovetail, across the ring tops.

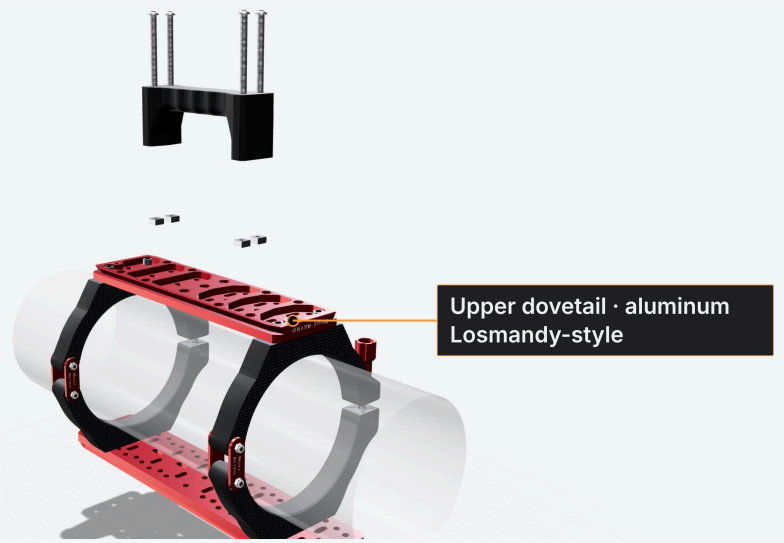

2 Square nuts in the bar

Four M6 square nuts sit in the pockets of the upper bar, under where the handle's feet go.

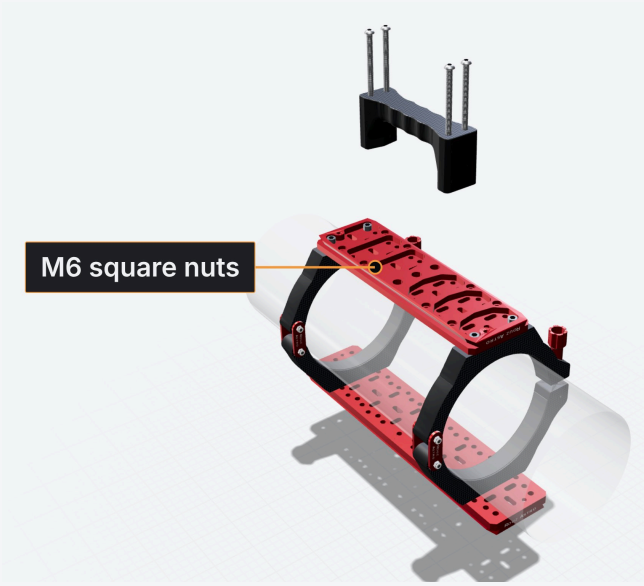

3 Handle on top

The handle's feet sit in the bar's slots, over the nuts.

4 Bolts in from the top

Four M6 button head bolts go down through the feet into the square nuts. Bolts come with the handle.

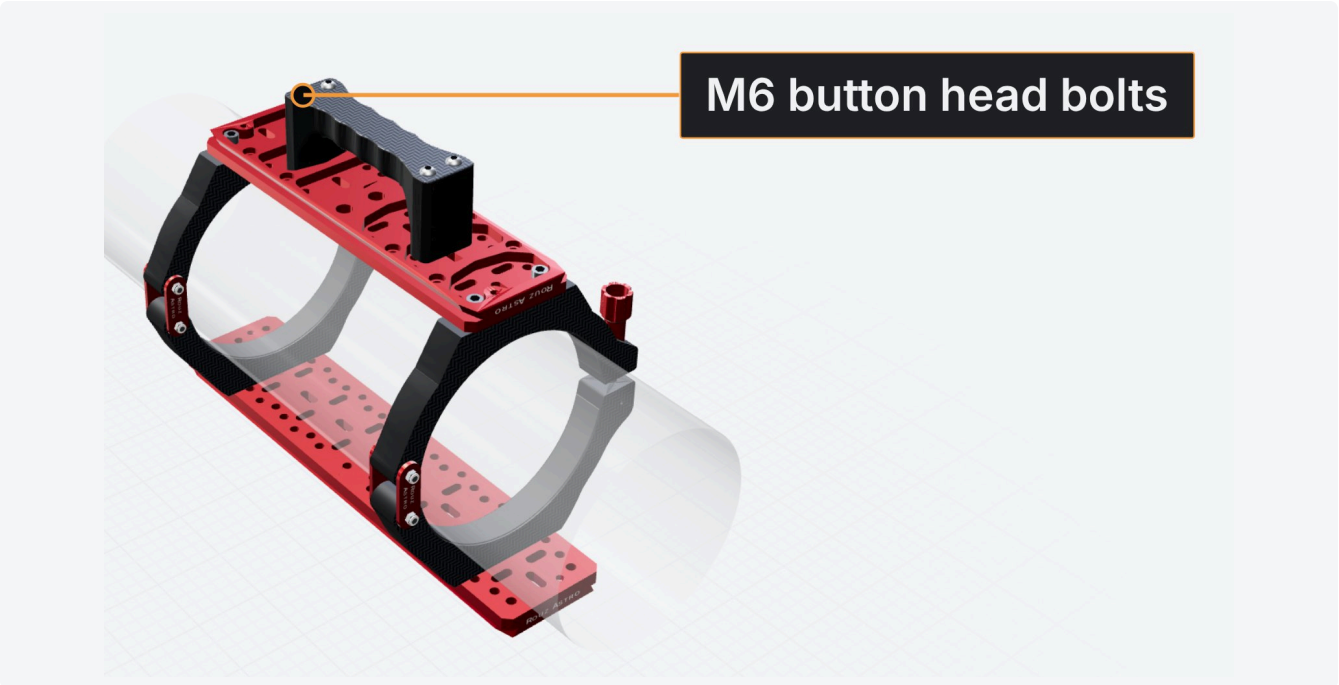

5 Pick its spot

The slots repeat along the bar, so the handle can sit further forward or back to balance the telescope.

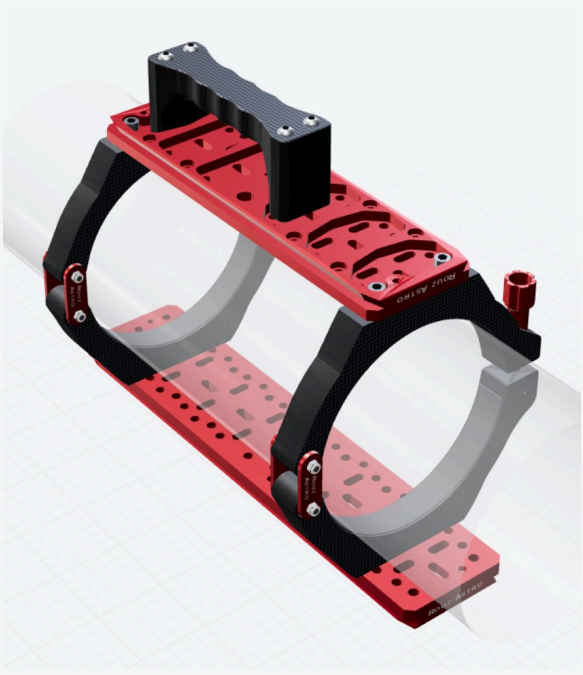

6 Or with accessory ports

The handle with accessory ports has the same feet and bolts, plus two ports for a finder, guide scope or other accessories.

7 Ready to carry

Lift the telescope by the handle, not the rings. See it on your own setup in the 3D builder.

Watch it in 3D

Scan the code to watch these steps as a 3D film, or go to **rouzastro.com/how-it-goes-together/?clip=handle**